

## STEP 3 INSTALLING THE SCRIM

### Supplies Check List (per panel)

- 11" Black UV rated zip-ties (enclosed supply = # grommets + 10%)


### Tools Needed...

- Heavy Duty Pliers with Wire Cutter feature.

### Tips...


- Loosely hang the panels and tighten as you go.

Step 1.

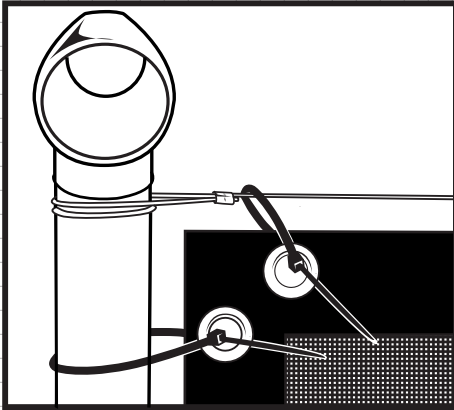


Using zip-ties, loosely attach each side of all four corners of the scrim panel.

Step 2.

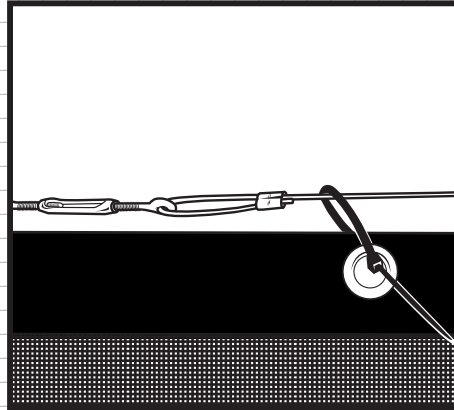


Using the zip-ties loosely attach all sides of the scrim panel through each of the grommets.

Step 3.

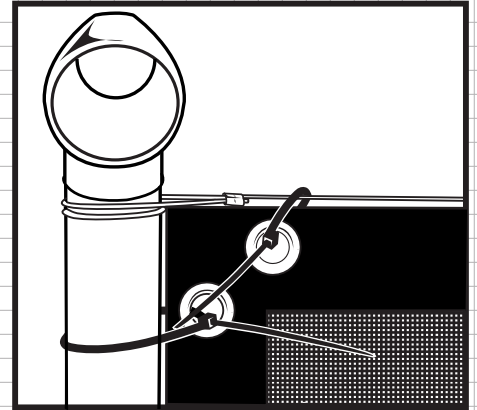


Tighten the zip-ties from the 4 corners before working around the entire perimeter of the panel.

Step 4.

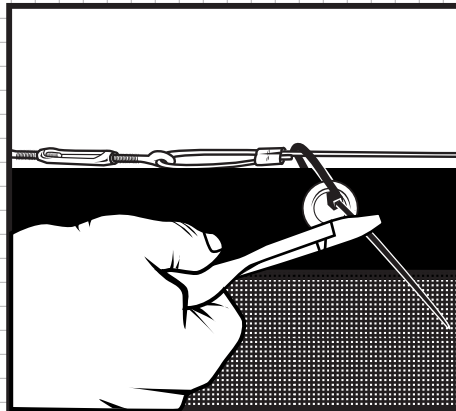

Trim the excess tails of the zip-ties, leaving approximately 1/2" in place. A small tail in place may be helpful for making adjustments in the future.

Step 5.

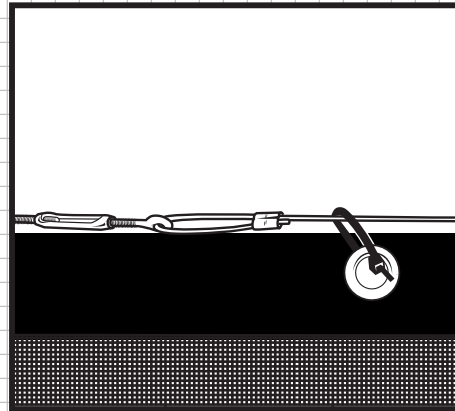

Rotate each of the zip-ties towards the interior of the frame structure for a clean, finished look.